

# Implanter/Implanter LED Dental Implant Unit Instruction Manual



**Guilin Woodpecker Medical Instrument Co., Ltd.**

ZMN-SM-023 V1.7-20230327

The pictures are only for reference. The final interpretation rights belong to Guilin Woodpecker Medical Instrument Co., Ltd. Woodpecker reserves the right to change the design of the equipment, the technique, fittings, instruction manual and the content of the original packing list at any time without further notice. The product were authorized appearance patent, counterfeit will be sued.

Thank you for purchasing Woodpecker Dental Implant Unit Implanter/Implanter LED. In order to guarantee the correct operation, it is recommended to read this instruction manual carefully before operation. For convenient reading, it is recommended to put it where is available at any time.

### **Device Type**

1. Type of protection against electric shock: Class I equipment with internal power supply
2. Degree of protection against electric shock: B type applied part
3. Recommended disinfection method: See section 6 Cleaning, disinfection, and sterilization
4. Waterproof protection is in line with the current version IEC60529: host IPX1, foot pedal IPX6.
5. Degree of safety application in the presence of a flammable anesthetic mixture with air, oxygen, or nitrous oxide: Equipment cannot be used in the presence of a flammable anesthetic mixture with air, oxygen, or nitrous oxide.
6. Operating mode: Intermittent operation

### **Precautions**

1. Please read these precautions before operation and operate in correct way.
2. The following icons is for ensuring safe operation, preventing you or others from being hurt. These icons are classified by degree of risk, degree of damage and severity. All indicators should be highly concerned. Please obey the instruction.

<b>Classification</b>	Degree of risk, degree of damage and severity
Dangers	Indicating potential personal injury or bodily injury
Warnings	Indicating potential slight injury or bodily injury
Precautions	Indicating instructions to be observed for ensuring safety

# Contents

1. Product introduction.....	1
2. Accessories description.....	3
3. Control of host and foot pedal .....	4
4. Installation.....	7
5. Operation .....	10
6. Clean, disinfection, and sterilization .....	19
7. Error code and solution (error alarm interface) .....	26
8. Storage and maintenance .....	27
9. Symbols.....	28
10. Specifications .....	29
11. After-sales service .....	30
12. Environment protection .....	30
13. Statement .....	30
14. Guarantee .....	30
15. EMC-Declaration of comformity.....	31

# 1. Product introduction

## 1.1 Precautions

### **Danger**

1. To prevent electric shock, do not use wet hands to pull the power cord; be sure to prevent the control circuit from water; use a grounded electrical outlet.
2. Keep it away from explosives and combustibles, with special care not to use this machine for patients who use nitrous oxide anesthesia.
3. This equipment may be used only by specialized and suitably trained personnel such as surgeons. The application place of the device is dental clinic or hospital. If correctly used, this equipment does not give rise to side effects. Improper use, on other hand, will give rise to transmission of heat to the tissues.

### **Warnings**

1. To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.
2. Not to position the device to make it difficult to operate the disconnection device.
3. In the presence of electromagnetic interference environment, the planter may be malfunctioning. Do not install the Dental Implanting Device near equipment that releases magnetic waves. When using ultrasonic vibrating equipment or electrode knife nearby, close the switch on the control panel.
4. Implanter/Implanter LED requires special precautions for EMC and needs to be installed and put into service according to the EMC environment.
5. Device with electromagnetic launcher will affect the normal operation of Implanter/Implanter LED, do not run both devices at the same time.
6. Implanter/Implanter LED cannot be used in operating rooms containing potentially flammable gas mixtures.
7. To avoid possible injury to human or damage to the device, make sure that the motor handpiece (hereinafter simply referred to as the motor) is completely parked when replacing the planting tool. And the replacement shall be conducted by foot pedal controller.
8. Severe impact, such as dropping, will lead to damage to the implanting device.
9. During the work of peristaltic pump, the water pipe cannot be excessive bending or knotting, otherwise the pipe may fracture.
10. Do not attempt to disassemble the control panel, foot control or motor.
11. Dental handpieces (hereinafter referred to as handpieces ) should be cleaned, lubricated and disinfected immediately after use.
12. Do not lubricate the motor. Lubricating oil can cause overheating, resulting in damage to the motor. Control panel and multi-function pedals cannot be disinfected.

13. Do not clean control panel with dissolving solution.
14. The motor cable cannot be removed from motor.
15. Switch off electrical power after each use.

### **Precautions**

1. If you need to repair and purchase spare parts, please contact the authorized supplier.
2. It is recommended to use the original pre-disinfection disposable water pipe combination.
3. The accuracy of torque monitoring depends on the accuracy of the handpiece installed on the micro motor. If the handpiece produced by other manufacturers is used, the actual torque value may not be displayed correctly. To ensure that the actual torque matches the displayed torque, please use the matched handpiece.
4. Please read this instruction manual before operation and master parts of functions.
5. Check the operating status of Implanter/Implanter LED before use and confirm that there is no abnormal condition.
6. Test the Implanter/Implanter LED before operation to ensure correct operation.
7. If there is a permanent malfunction (excessive vibrations, noise, heat production, etc.) on the Implanter/Implanter LED, please immediately close it and return it to the authorized dealer.
8. If the frequency of use is very high, please consider storing some spare parts.
9. Please cut off the power before cleaning the control panel with a damp cloth.
10. Dispose water pipe after operation with the method of disposing medical waste.
11. The operation mode of Implanter/Implanter LED is Intermittent operation mode, i.e., there will be 10 minutes pause after 3 minutes' operation. If there is no system overheating, it will prevent the patients, users or the third party from hurt. The user should be responsible for the use and shutdown of system.

This instruction manual is intended to indicate the safety requirements, installation procedures, proper methods of use and proper maintenance of the equipment. If you encounter any unexpected problems, please contact Service Center of Guilin Woodpecker Medical Instrument Co., Ltd.

The manufacturer will not be responsible for any personal injury or property damage caused by device tampering or modification conducted by unauthorized person.

Woodpecker reserves the right to change the design of the equipment, the technique, fittings, instruction manual and the content of the original packing list at any time without further notice. The pictures are only for reference. The final interpretation rights belong to Guilin Woodpecker Medical Instrument Co., Ltd.

Guilin Woodpecker Medical Devices Co., Ltd. will continue to update its products, thus bring changes in device components. If there is any difference between your manual and the description on your product, please contact the authorized distributor or after-

sales service center of Guilin Woodpecker Medical Instrument Co., Ltd. for explanation.

This manual is strictly prohibited from being used in any way other than installation, use and maintenance of the equipment.

## **1.2 Contraindications and precautions**

1.2.1 The hemophilia patient is forbidden to use this equipment.

1.2.2 The patients and doctors with heart pacemaker are forbidden to use this equipment.

1.2.3 Heart disease patients and children should be cautious to use the equipment.

1.2.4 Patients with oral and maxillo-facial infection, oral mucosal diseases, periapical disease, gingivitis, periodontitis, or mouth neoplasm should be cautious to use this equipment.

1.2.5 Patients with allergic constitution and drug allergy history are forbidden to use this equipment.

1.2.6 People with mental disorders should be cautious to use this equipment.

1.2.7 Patients with severe systemic infection or systemic diseases such as the diseases of heart, liver, kidney, hematopoietic system, digestive system and endocrine system should be cautious to use this equipment.

8. Pregnant women, lactating women, and women have a plan of birth should be cautious to use this equipment.

## **1.3 Scope of use**

This product is intended for use in dental surgery, thus other uses are not allowed. There will be potential danger if it is used for other purposes!

## **1.4 Safety requirement**

Guilin Woodpecker Medical Instrument Co., Ltd. will NOT be responsible for any direct or indirect damages and losses under the following conditions:

The equipment is used for any purpose that is not mentioned in the scope of use.

The operator does not follow the steps and requirements in instruction manual to use the device.

The cabling system of the room where the device is used does not meet the appropriate standards and the appropriate requirements.

Assemble, operate and repair the device without authorization of manufacturer.

The environment in which the device is located or stored does not meet the requirements mentioned in technical requirements section of the instruction manual.

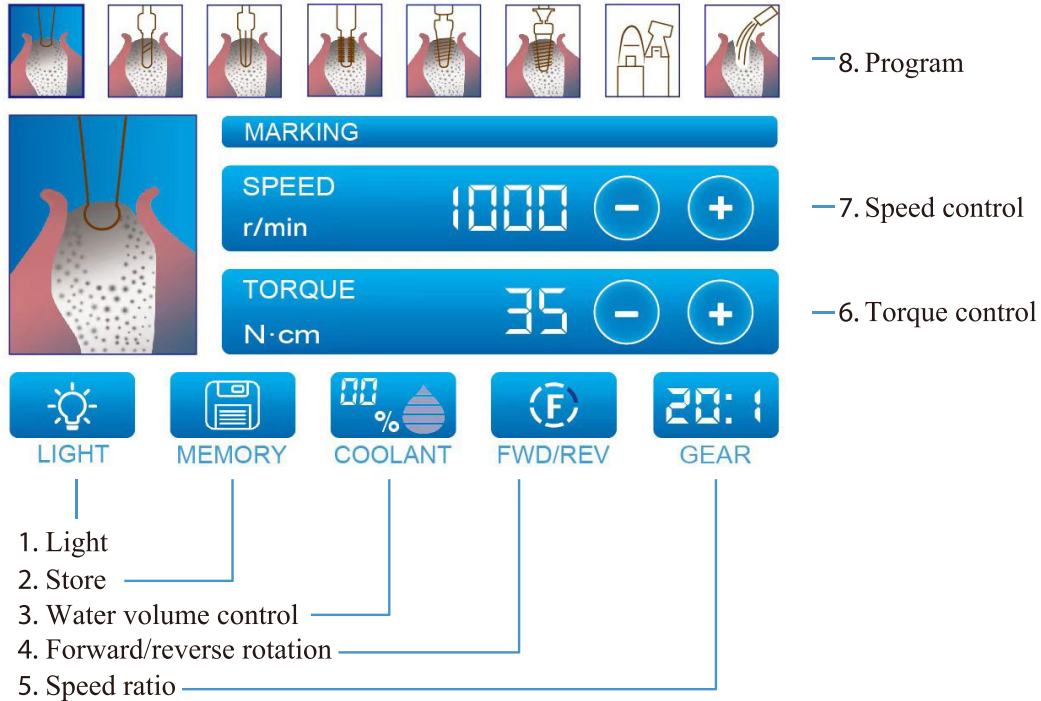
## **2. Accessories description**

Please refer to packing list for device configuration.

## 3. Control of host and foot pedal

### 3.1 Control of host keys

#### 3.1.1 Working interface and control of keys



- 1. Light key Motor LED switch; circular touch to control the on/off of LED.
- 2. Store key Store key; click to store setting specifications.
- 3. Water control key Click to select water volume. Six water gear, including 00%, 20%, 40%, 60%, 80%, and 100%. Circularly

press the key to select.

4. Forward/reverse rotation

Used to select the direction of rotation; direction changes for each pressing.

5. Speed ratio key

Used to set the gear ratio with handpiece; repeatedly pressing till the LCD correctly displays gear ratio with handpiece.

6. Torque control key

Used to set torque range of motor; “+” for increase, while “-” for decrease. Press and hold to accelerate the speed change.

7. Speed control key

Used to set rotating speed of motor; “+” for speed up, while “-” for slow down. Press and hold to accelerate the speed change.

8. Program key

Touch the icons to choose corresponding programs. Please refer to the Clause 5.1 for the functions of each program.

### 3.1.2 Interface of restoring the factory settings



Figure 1 Restore factory setting interface

While starting up, press the foot pedal at the same time. The factory reset menu will pop up as shown in the picture. When "YES" is selected, the saved parameters will be cleared and the original factory setting parameters will be restored. When "No" is selected, the factory settings will not be restored and the system will boot normally.



## 3.1.3 Error alarm interface


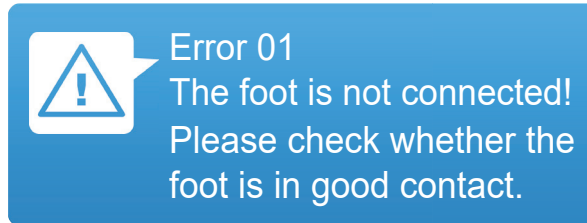


Figure 3 Error alarm interface

As shown in Figure 3, the warning 0x indicates alarm number. Please refer to section 7 Error code and solution for specific number and the corresponding content.

## 3.2 Foot pedal control

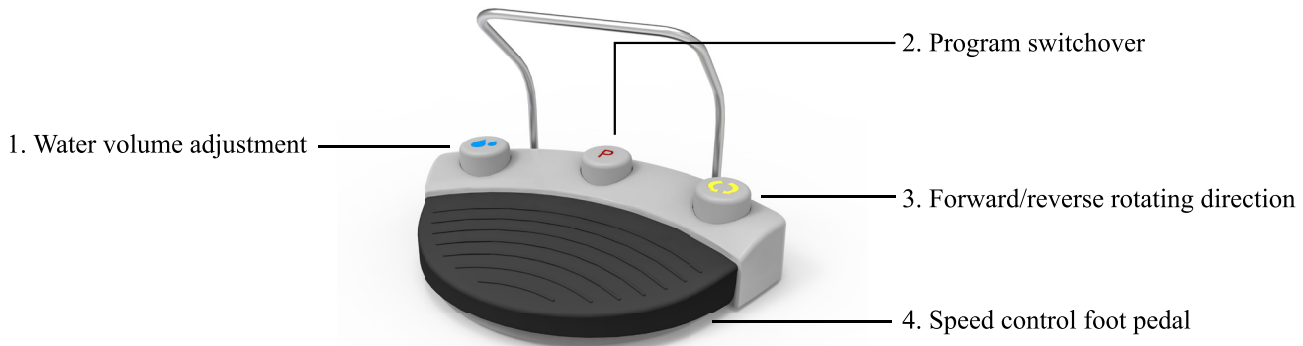

### 1. Water volume adjustment button

Water volume adjustment button used for choosing 6 cooling water flow levels. The water level is incremented each time the button is stepped. At the maximum level 6, pressing once to loops back to level 1.

### 2. Program switchover button

Used for choosing needed programs. The program is changed each time the button is stepped. At the Program 8, pressing once to loops back to Program 1. Short press Program button to move forward to next program, and long press (>2s) to move back to last program.

3. Forward / reverse rotating direction

Used for changing the rotating direction of contra-angle. The direction will change after stepping.


4. Speed control foot pedal

Used to start/stop the motor and control the speed during operation. The operating speed of motor is controlled by the foot of operator. After lifting the foot, the displayed data will change to the maximum setting value.


## 4. Installation


### 4.1 Safety requirements during installation

 **Danger:** Equipment is installed on the premise that the installation must meet the appropriate standards and related electrical safety requirements.


 **Danger:** Never install the device in an explosion-hazardous area and the device must not be operated in areas with flammable gases (anesthetic mixture, oxygen, etc.).

 **Danger:** Installation site should be able to protect device from shocks and splashing of water or other liquids.

 **Danger:** Do not install the device near or above a heat source. It must be installed in a well-ventilated area with sufficient space around it, especially the exhaust fan and back.

 **Warning:** Do not directly expose the parts to the sun or UV light source.

 **Warning:** The device is movable. Be careful while handling it.

 **Warning:** Before connecting the cord to the device, make sure the joint is dry. If necessary, dry it with air gun.

## 4.2 Accessories connection

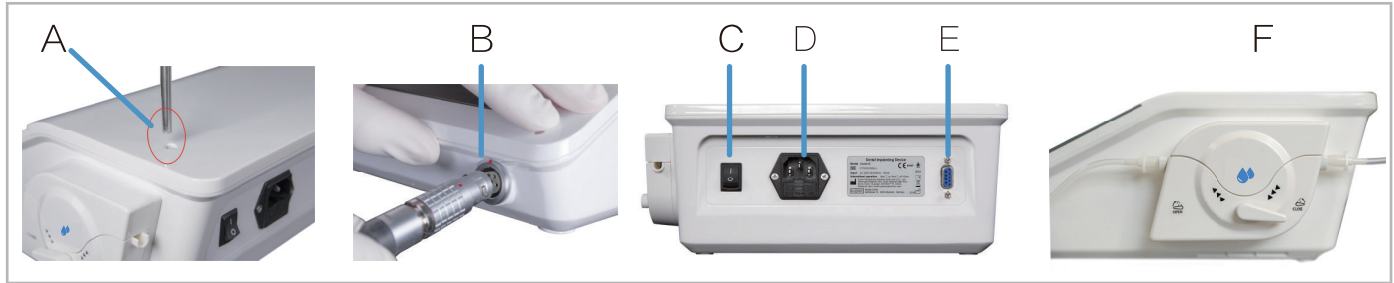


Figure 4

### 4.2.1 Installation of foot pedal:

Connect the foot pedal plug to the foot pedal socket and tighten those two fixing screws (Figure 4 - E)

### 4.2.2 Power cord installation:

Plug the power cord output into the power supply socket of the device (Figure 4 - D)

### 4.2.3 Installation of infusion bottle holder:

Insert the infusion bottle holder into the fixing hole on the right rear of the shell; (Figure 4 - A)

### 4.2.4 Installation of infusion bottle:

Hang the infusion bottle (The infusion bottle contains purchased normal saline injection.) on its holder.

### 4.2.5 Installation of motor:

Plug the tail cord of motor into the output socket on the front of the device (Note: align the red marking point). (Figure 4 - B)



Figure 5

#### 4.2.6 Peristaltic pump tube installation:

A. Turn the peristaltic pump knob anticlockwise (The direction is as indicated by the arrow above "CLOSE") to the "OPEN" indicator and open the pump head (Figure 5-A).

B. Place the tube in the impeller of the peristaltic pump (Figure 5 - B).

C. Turn the peristaltic pump knob clockwise (The direction is as indicated by the arrow above "OPEN") to the "CLOSE" position and close the pump head (Figure 5 - D).

#### 4.2.7 Complete machine effect after installations of all accessories: (Figure 6)



Figure 6

#### 4.2.8 Switch on (Figure 4 - C) ; start to use the machine as it display normally:

Step on the pedal after the parameters such as speed, torque and water are set properly. The device starts to work. When the pedal is released, the device stops working.

## 5. Operation

### 5.1 Program

#### 5.1.1 Choice of programs



Implanter/Implanter LED owns 8 programs. There are two ways to choose program:

 
 

 


1. Touch the corresponding icons on the screen.
2. Step on the “Program switchover” button on the foot pedal.



#### 5.1.2 Function description of programs

The function of each program is as shown as follow:

Icon	Function	Description
	Positioning	Accurate positioning on the alveolar bone by using a positioning drill.
	Hole-drilling	Determine the direction and depth of hole-drilling.









	Hole-broadening	Determine the diameter of the hole.
	Tapping	Make a thread on the hole to match the implant.
	Implanting	Implant dental implants into alveolar bone.
	Lock the abutment screw	Screw the nut onto the dental implant.
	User defined mode	Change straight handpiece, contra-angle with different speed ratios for different dental procedures.
	Cleaning	Water discharging without motor rotation is convenient for flushing.

### 5.1.3 Factory Settings

Before delivery, several parameters mainly including speed, torque, speed ratio and water output have been set according to the actual application. These parameters can be changed within the range of parameters specified in the current program.

# Implanter/Implanter LED

The range of different parameters and their factory settings are as shown in the table below:

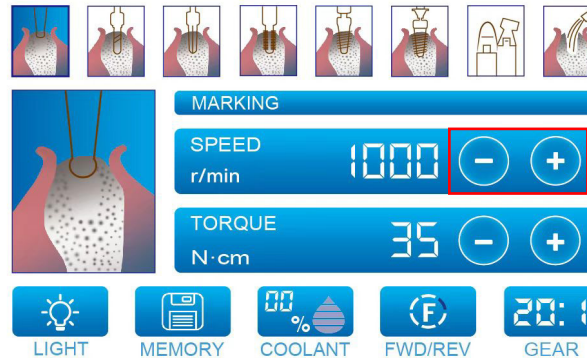
Icon	Function	Speed/ r/min	Torque/ N·cm	Speed ratio	Water output/%
	Positioning	45-2500 1000(D)	5-80 35(D)	16:1,20:1, 27:1,20:1(D)	60
	Hole-drilling	45-2500 800(D)	5-80 35(D)	16:1,20:1, 27:1,20:1(D)	60
	Hole-broadening	45-2500 600(D)	5-80 35(D)	16:1,20:1,27:1,20:1(D)	60
	Tapping	10-100 20(D)	5-80 35(D)	16:1,20:1, 27:1,20:1(D)	60
	Implanting	10-100 20(D)	5-80 35(D)	16:1,20:1, 27:1,20:1(D)	0
	Lock the abutment screw	10-100 20(D)	5-15 10(D)	16:1,20:1, 27:1,20:1(D)	0
	User defined mode	10-200000 1200(D)	5-80 45(D)/Max	1:1 1:2 1:2.7 1:3 1:4.2 1:5 16:1 20:1 27:1 20:1(D)	60
	Cleaning	—	—	—	80

**Note:** the letter “D” stands for default value. The tapping function and implanting function are prohibited in the user defined mode.

## 5.2 Default parameter adjustment

Within specified range, the adjustable parameters are as follow:

1. Maximum speed
  2. Maximum torque
  3. Water output
  4. Speed ratio
- 5.2.1 Maximum speed adjustment



Touch the “Speed” (+, -) key to adjust motor speed. The speed will change each time after touching the “Speed” key. Long press the “Speed” key to accelerate the change of speed setting value.




## 5.2.2 Maximum torque adjustment




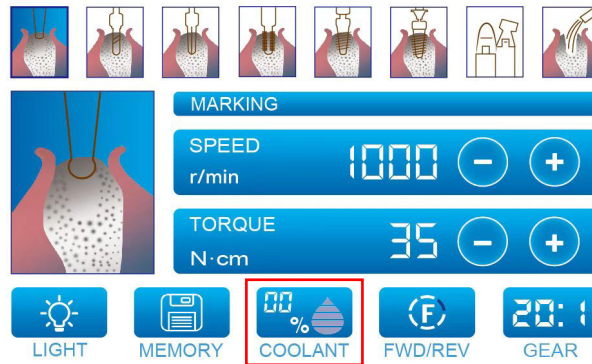Touch the “Torque” (+, -) key to adjust maximum torque output of motor. The torque will change each time after touching the “Torque” key. Long press the “Torque” key to accelerate the change of torque setting value.

### 5.2.3 Water output adjustment



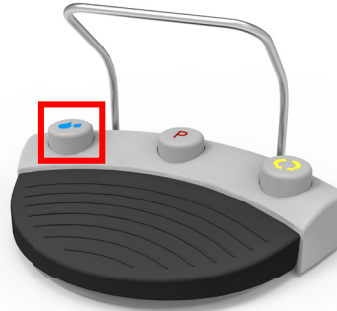Touch the "Water volume" key on the screen to adjust. There are 6 water levels. The water level will change to the next level after each touch.



Step on the blue "Water volume adjustment" button to adjust water volume.  
5.2.4 Speed ratio adjustment



Adjust by pressing the "Speed Ratio" button to match the gear ratio of the handpiece to be used.

## 5.3 Motor rotating direction adjustment



Touch the key shown above to change the rotating direction of motor.



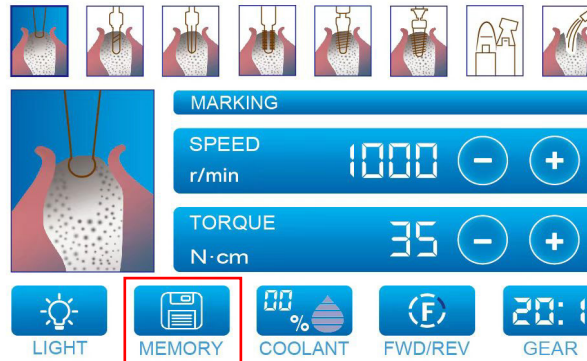
Step on the “Forward/reverse rotation” during operation to change the rotating direction of motor.

### 5.4 Motor LED adjustment



Touch the “LED” button to for setting to determine the on or off state of LED while stepping on foot pedal. The state of LED will change once after each touch. Only the device with LED owns this function.

### 5.5 Save the parameters




After finishing the above steps, press “Store” key. You will hear a beep if the parameters are saved.

## 5.6 Standard operation

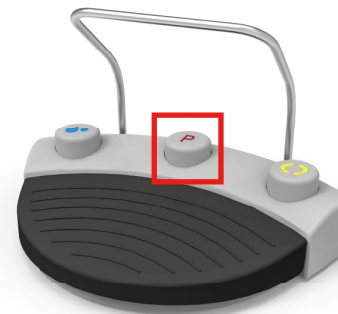1. After installation of corresponding accessories, connect to the power supply, and turn on the power supply. After booting, the displayed interface is default to be Program 1.




2. Touching screen or stepping on the “Program switchover” button on the foot pedal to choose the program.



3. Confirm that the speed, torque, water flow, forward/reverse rotation, speed ratio and other parameters of corresponding program meet the requirements.

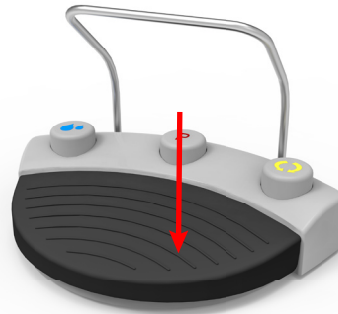4. Step on the foot pedal, and then motor starts to rotate. Deep step to accelerate; the maximum speed value is the current program speed setting value; light step to reduce the speed; the minimum trigger speed is 15 r/min (Gear ratio of handpiece: 20:1). After fully release, the speed restore to the set value speed.



5. Torque protection will start as the torque reaches preset value. Meanwhile, the motor slows down to stop, preventing from generating excessive torque. Release foot pedal to remove torque protection. Step again, and the motor will rotate under preset torque value.
6. Release foot pedal, and the motor stop rotating.

## 6. Clean, disinfection, and sterilization

If there is blood or salt residue on the main unit and foot controller, unplug the power cord, wipe it off with a damp cloth, and wipe with a soft cloth dampened with alcohol. The contra-angle handpiece and the motor hanpiece can be disinfected with heat sterilizers. Plug in motor disinfection stopper before disinfection the motor hanpiece!

### **Warning:**

Never place the main unit and foot controller in a washer-disinfector, autoclave or ultrasonic bath.

### **Warning:**

If you use a disinfectant in the form of a spray, never spray the devices and accessories directly.

### **Warning:**

Only use surface disinfectants that are certified by officially recognized institutes, do not contain chlorine and have been declared aldehyde-free.

**Warning:**

Clean and disinfect the main unit and foot controller regularly. When subjecting the main unit and foot controller to cleaning and disinfection ensure that the charging cable is not connected and that the charging socket is closed.

**Warning:**

Only the following parts can be sterilized:

Contra-angle handpiece and its kit, motor hanpiece, handpiece holder, motor disinfection stopper, pipe clamp, O-ring.

### **The cleaning, disinfection and sterilization of the contra-angle handpiece and the motor hanpiece are as follow.**

Unless otherwise stated, they will be hereinafter referred to as “products”.

**Warnings:**

The use of strong detergent and disinfectant (alkaline pH>9 or acid pH <5) will reduce the life span of products. And in such cases, the manufacturer takes no responsibility.

The products may not be exposed to temperature above 138°C.

#### **6.1 Processing limit:**

The products have been designed for a large number of sterilization cycles. The materials used in manufacture were selected accordingly. However with every renewed preparation for use, thermal and chemical stresses will result in ageing of the products. The maximum number of sterilizations for motor handpiece is 250 times. The allowed maximum times of sterilization for contra-angle handpiece is 600 times.

#### **6.2 Initial processing:**

Processing principles:

It is only possible to carry out effective sterilization after the completion of effective cleaning and disinfection. Please ensure that, as part of your responsibility for the sterility of products during use, only sufficiently validated equipment and product-specific procedures are used for cleaning/disinfection and sterilization, and that the validated parameters are adhered to during every cycle. Please also observe the applicable legal requirements in your country as well as the hygiene regulations of the hospital or clinic, especially with regard to the additional requirements for the inactivation of prions.

#### **6.3 Post-operative treatment:**

The post-operative treatment must be carried out immediately, no later than 30 minutes after the completion of the operation. The steps are as follows:

1. Wipe all visible surfaces of the device with a disposable soft cloth, including motor handpiece, water bottle hooks, pedals, and cables. And then dry them after washing;
2. Wipe all visible surfaces of the device including motor handpiece, water bottle hooks, pedals and cables with a disposable soft cloth dampened with disinfectant to ensure that all surfaces are wet. Let the disinfectant work during a specified period of time and then dry the surface;
3. Dry all the cleaned and disinfected parts thoroughly in the air indoors.

**Cautions:**

- (1) Do not automatically clean the main unit.
- (2) Do not use metal brushes.

**6.4 Preparation before cleaning:**

Steps:

Tools: tray, a disposable soft cloth, a disposable soft cloth dampened with disinfectant, motor disinfection stopper

1. Remove the motor handpiece from the main engine and put the motor handpiece into a clean tray.
2. Please plug the motor disinfection stopper in the motor handpiece.

**6.5 Cleaning:**

The cleaning should be performed no later than 24 hours after the operation.

The cleaning can be divided into automated cleaning and manual cleaning. Automated cleaning is preferred if conditions permit.

**Automated cleaning:**

The parts that can be cleaned automatically are as follow: contra-angle handpiece.

- The cleaner is proved to be valid by CE certification in accordance with EN ISO 15883.
- There should be a flushing connector connected to the inner cavity of the product.
- The cleaning procedure is suitable for the product, and the irrigating period is sufficient.
- Do not clean the product with ultrasound.

It is recommended to use a washer-disinfector in accordance with EN ISO 15883. For the specific procedure, please refer to the automated disinfection section in the next section "Disinfection".

**Manual cleaning:**

The parts that need to be cleaned Manually are as follow: motor handpiece.

Manual cleaning steps:

1. Wet the soft cloth completely with distilled water or deionized water, and then wipe all the surfaces of the handpiece and main



unit until the surface of them is not stained.

2. Wipe the surface of the handpiece and main unit with a dry soft nap-free cloth.

3. Repeat the above steps at least 3 times.

Notes: Use distilled water or deionized water for cleaning at room temperature.

### **Precautions:**

(1) The cleaning agent does not have to be pure water. It can be distilled water, deionized water or multi-enzyme. But please ensure that the selected cleaning agent is compatible with the product.

(2) In washing stage, the water temperature should not exceed 45 °C, otherwise the protein will solidify and it would be difficult to remove.

(3) After cleaning, the chemical residue should be less than 10mg / L.

### **6.6 Disinfection:**

Disinfection must be performed no later than 2 hours after the cleaning phase. Automated disinfection is preferred if conditions permit.

#### **Automated disinfection-Washer-disinfector:**

The parts that can be disinfected automatically are as follow: contra-angle handpiece.

- The washer-disinfector is proved to be valid by CE certification in accordance with EN ISO 15883.

- Use high temperature disinfection function. The temperature does not exceed 134 ° C, and the disinfection under the temperature cannot exceed 20 minutes.

- The disinfection cycle is in accordance with the disinfection cycle in EN ISO 15883.

#### **Cleaning and disinfecting steps by using Washer-disinfector:**

1. Carefully place the product into the disinfection basket. Fixation of product is needed only when the product is removable in the device. The products are not allowed to contact each other.

2. Use a suitable rinsing adaptor, and connect the internal water lines to the rinsing connection of the washer-disinfector.

3. Start the program.

4. After the program is finished, remove the product from the washer-disinfector, inspect (refer to section "Inspection and Maintenance") and packaging (refer to chapter "Packaging"). Dry the product repeatedly if necessary (refer to section "Drying").

### **Precautions:**

(1) Before use, you must carefully read the operating instructions provided by the equipment manufacturer to familiarize yourself with the disinfection process and precautions.

(2) With this equipment, cleaning, disinfection and drying will be carried out together.

(3) Cleaning:

(a) The cleaning procedure should be suitable for the product to be treated. The flushing period should be sufficient (5-10 minutes). Pre-wash for 3 minutes, wash for another 5 minutes, and rinse it for twice with each rinse lasting for 1 minute.

(b) In the washing stage, the water temperature should not exceed 45 °C, otherwise the protein will solidify and it is difficult to remove.

(c) The solution used can be pure water, distilled water, deionized water or multi-enzyme solution, etc., and only freshly prepared solutions can be used.

(d) During the use of cleaner, the concentration and time provided by manufacturer shall be obeyed. The used cleaner is neodisher MediZym(Dr.Weigert).

(4) Disinfection:

(a) Direct use after disinfection: temperature  $\geq 90$  ° C, time  $\geq 5$  min or  $A0 \geq 3000$ ;

Sterilize it after disinfection and use: temperature  $\geq 90$  ° C, time  $\geq 1$  min or  $A0 \geq 600$

(b) For the disinfection here, the temperature is 93 ° C, the time is 2.5 min, and  $A0 > 3000$

(5) Only distilled or deionized water with a small amount of microorganisms (<10 cfu/ml) can be used for all rinsing steps. (For example, pure water that is in accordance with the European Pharmacopoeia or the United States Pharmacopoeia).

(6) After cleaning, the chemical residue should be less than 10mg / L.

(7) The air used for drying must be filtered by HEPA.

(8) Regularly repair and inspect the disinfectant.

**Manual disinfection:**

The parts that need to be disinfected Manually are as follow: motor handpiece.

Manual disinfection steps:

1. Soak the dry soft cloth with 75% alcohol.

2. Wipe all the surfaces of the motor handpiece with a wet soft cloth for at least 3 minutes.

3. Wipe the surface of motor handpiece with a dry soft nap-free cloth.

Notes:

a) The cleaning and disinfection must be performed within 10min before use.

b) The disinfectant used must be used immediately, no foaming is allowed.

c) In addition to 75% alcohol, you can use non-residue disinfectants such as Oxytech from Germany, but you must respect the concentration, temperature and time specified by the disinfectant manufacturer.

### 6.7 Drying:

If your cleaning and disinfection process does not have an automatic drying function, dry it after cleaning and disinfection.

Methods:

1. Spread a clean white paper (white cloth) on the flat table, point the product against the white paper (white cloth), and then dry the product with filtered dry compressed air (maximum pressure 3 bar). Until no liquid is sprayed onto the white paper (white cloth), the product drying is completed.
2. It can also be dried directly in a medical drying cabinet (or oven). The recommended drying temperature is 80°C ~ 120°C and the time should be 15 ~ 40 minutes.

#### **Precautions:**

- (1) The drying of product must be performed in a clean place;
- (2) The drying temperature should not exceed 138 °C;
- (3) The equipment used should be inspected and maintained regularly.

### 6.8 Inspection and maintenance:

In this chapter, we only check the appearance of the product. Make sure the inspection is correct.

1. Check the product. If there is still visible stain on the product after cleaning/disinfection, the entire cleaning/disinfection process must be repeated.
2. Check the product. If it is obviously damaged, smashed, detached, corroded or bent, it must be scrapped and not allowed to continue to be used.
3. Check the product. If the accessories are found to be damaged, please replace it before use. And the new accessories for replacement must be cleaned, disinfected and dried.
4. If the service time (number of times) of the product reaches the specified service life (number of times), please replace it in time.

### 6.9 Packaging:

The disinfected and dried product quickly package in a medical sterilization bag (or special holder, sterile box).

#### **Precautions:**

- (1) The package used conforms to ISO 11607;
- (2) It can withstand high temperature of 138 °C and has sufficient steam permeability;
- (3) The packaging environment and related tools must be cleaned regularly to ensure cleanliness and prevent the introduction of contaminants;
- (4) Avoid contact with parts of different metals when packaging.

## 6.10 Sterilization:

Use only the following steam sterilization procedures (fractional pre-vacuum procedure\*) for sterilization, and other sterilization procedures are prohibited:

1. The steam sterilizer complies with EN13060 or is certified according to EN 285 to comply with EN ISO 17665;
2. The highest sterilization temperature is 138 ° C;
3. The sterilization time is at least 4 minutes at a temperature of 132 ° C / 134 ° C and a pressure of 2.0 bar ~ 2.3 bars.
4. Allow a maximum sterilization time of 20 minutes at 134 °C.

Verification of the fundamental suitability of the products for effective steam sterilization was provided by a verified testing laboratory.

### Precautions:

- (1) Only products that have been effectively cleaned and disinfected are allowed to be sterilized;
- (2) Before using the sterilizer for sterilization, read the Instruction Manual provided by the equipment manufacturer and follow the instructions.
- (3) Do not use hot air sterilization and radiation sterilization as this may result in damage to the product;
- (4) Please use the recommended sterilization procedures for sterilization. It is not recommended to sterilize with other sterilization procedures such as ethylene oxide, formaldehyde and low temperature plasma sterilization. The manufacturer assumes no responsibility for the procedures that have not been recommended. If you use the sterilization procedures that have not been recommended, please adhere to related effective standards and verify the suitability and effectiveness.

\* Fractional pre-vacuum procedure = steam sterilization with repetitive pre-vacuum. The procedure used here is to perform steam sterilization through three pre-vacuums.

## 6.11 Storage:

1. Store in a clean, dry, ventilated, non-corrosive atmosphere with a relative humidity of 10% to 93%, an atmospheric pressure of 70KPa to 106KPa, and a temperature of -20 °C to +55 °C;
2. After sterilization, the product should be packaged in a medical sterilization bag or a clean sealing container, and stored in a special storage cabinet. The storage time should not exceed 7 days. If it is exceeded, it should be reprocessed before use.

### Precautions:

- (1) The storage environment should be clean and must be disinfected regularly;
- (2) Product storage must be batched and marked and recorded.

## 6.12 Transportation:

1. Prevent excessive shock and vibration during transportation, and handle with care;
2. It should not be mixed with dangerous goods during transportation;
3. Avoid exposure to sun or rain or snow during transportation.

### **The cleaning and disinfection of main unit are as follows.**

- Before each use, wipe the surface of the machine and the tail cord of the motor handpiece with a soft cloth or paper towel soaked in 75% medical alcohol. Repeat the wipe for at least 3 times.
- After each use, wipe the surface of the device and the tail cord of the motor handpiece with a soft cloth soaked in clean water (distilled or deionized water) or a clean disposable wipe. Repeat the wipe for at least 3 times.

## 7. Error code and solution (error alarm interface)

When there is a problem with the operation, the display will provide the error code of the problem diagnosis: Specifically, switch to the error prompt interface for explanation and solution to the problem:

Error code	Error description	Solution
Error 01	Foot pedal is not connected	Please ensure the foot pedal is connected. If the alarm is not eliminated, please contact our local distributor or us.
Error 02	Motor voltage error	The power supply voltage is unstable. Please ensure that the grid voltage is stable. If the alarm is not eliminated, please contact our local distributor or us.
Error 03	Power-on failure	The motor handpiece is not connected when the machine is turned on. Make sure that the motor handpiece and the main unit are properly connected and then power on again. If the alarm is not eliminated, please contact our local distributor or us.
Error 04	The handpiece is not connected	Please check if the handpiece is in good contact. If the alarm is not eliminated, please contact our local distributor or us.
Error 05	Abnormal signal line	Please contact our local distributor or us.
Error 06	The circuit is abnormal	Please contact our local distributor or us.
Error 07	Operation failure	Please check if the parameter settings are normal.

## 8. Storage and maintenance

8.1 The device should be handled carefully and lightly. Be sure that it is far from the vibration, and installed or kept in a cool, dry, and ventilated place.

8.2 Do not store the machine together with articles that is poisonous, combustible, caustic, or explosive.

8.3 This device should be stored in a room where the relative humidity is not more than 10%~93%, atmospheric pressure is 70kPa~106kPa, and the temperature is -20°C ~ +55°C.

8.4 Turned off power switch and unplug the power plug when the device is not in use. If it is not used for a long time, please get through to power supply and water for five minutes once per month.

8.5 Check the integrity of cable. If it is damaged, please replace it with original accessories.

8.6 After each operation, the contra-angle shall be cleaned, applied oil, and disinfected as per requirements. If it is not used for a period, please clean it, apply oil to it, and disinfect is at least once a week.

### Replacement of fuse

Power supply shall be cut off while intending to conduct the following operations. And disconnect power supply cable and main power supply. (See Figure 7 - Refer to B)










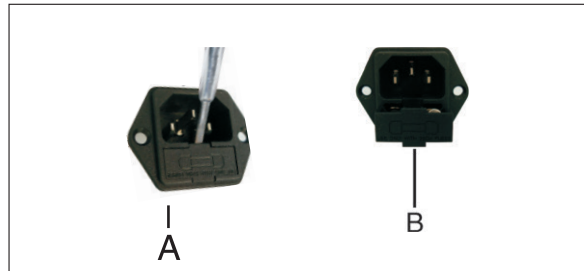

 


 







Figure 7

1. Danger: Switch off the apparatus.
  2. Insert a flat-blade screwdriver to the groove under the power supply hole, and then pry it out (Figure 7 - ref. A);
  3. Pull out the fuse compartment (see Figure 7 - Ref. B) and select the appropriate fuse for replacement by following the label on the bottom of the power supply socket.
- 8.7 The maintenance personnel appointed by the manufacturer can obtain the equipment maintenance-related data (such as circuit diagrams, component lists, etc.) from the manufacturer.

## 9. Symbols

	Use indoor only		Alternating current
	Socket for the foot switch		Caution mechanical injury
	Manufacturer		Date of manufacture
IPX1	Drip-proof	IPX6	Strong water spraying experiment
	Type B applied part		Can be autoclaved
	Caution		Protective earthing
	Serial number		Humidity limit for storage
	Atmospheric pressure for storage		Temperature limit for storage
	Appliance complies with WEEE directive		Follow Instructions for Use
	Parts with water line		Water flow direction
 OPEN	Position of the knob when the peristaltic pump is on and the direction in which the knob can be rotated in the current state		



**CLOSE**

Position of the knob when the peristaltic pump is off and the direction in which the knob can be rotated in the current state

Note: Please refer to product packaging label for production date.

## 10. Specifications

### 10.1 Host specifications

Model: Implanter/Implanter LED

Device for intermittent operation: 3 min ON,10 min OFF

Power supply voltage: 110V~

Power supply frequency: 50/60Hz

Software version: Implant-V1

Input power: 150VA

Fuses: 2×T3.15AL 250V

Applied parts: Contra-angle handpiece

Maximum Temperature: 41.8°C

Maximum water volume: 135ml/min

Dimension: 276mm\*267mm\*110mm

Operation environment:

Environment temperature: +5~40°C

Relative humidity: 30%~75%

Atmosphere pressure:70kPa~106kPa

Device case material: PC+ABS

Handpiece material: brass

### 10.2 Motor specifications:

Model: SPM58L, SPM58NL, SPM58, SPM58LS, SPM45L, SPM45NL

Rotating speed range: 300-40,000 r/min

Torque range: 5-80 N·cm(ratio: 20:1)

Input voltage: DC29V



Dimension: Maximum diameter 21.5 mm, Length 110 mm

Tail cord length: 1.8m

### 10.3 Foot pedal controller specifications

Model: MF4

Tail cord length: 2.8m

## 11. After-sales service

Since the date of sale, the device enjoys one year of free warranty, and our company is responsible for the lifetime maintenance. Irreparable damage to device caused by non-designated professional maintenance personnel does not belong to the scope of free warranty.

## 12. Environment protection

The device does not contain any harmful ingredients. It can be handled or destroyed in accordance with the relevant local regulations.

## 13. Statement

Woodpecker reserves the right to change the design of the equipment, the technique, fittings, instruction manual and the content of the original packing list at any time without further notice. The pictures are only for reference. The final interpretation rights belong to Guilin Woodpecker Medical Instrument Co., Ltd.

## 14. Guarantee

**14.1 Before being put into market, all woodpeckers device should be thoroughly inspected to ensure proper use.**

**14.2 Woodpecker promised that for any new products purchased from authorized distributors or importers of Woodpeckers, if ill function is resulted from the quality problem, you are entitled to free replacement during the warranty period:**

- One year since the date of purchasing equipment;
- One year since the date of purchasing motor and tail cord.

**14.3 During the warranty period, Woodpecker will repair or replace the damaged parts of the device for free.**

**14.4 Woodpeckers will not be responsible for any direct or indirect damage and loss if:**

14.4.1 The equipment is used for any purpose other than the mentioned scope of use.

14.4.2 The operator does not follow the steps and requirements stipulated in the instruction manual to use the device.

14.4.3 The cabling system of the room where the equipment is used does not meet the appropriate standards and the appropriate requirements.

14.4.4 The device is installed, operated, or repaired by the unauthorized personnel.

14.4.5 The environment where the device is used and stored does not meet the requirements stipulated in relevant section of instruction manual.

**14.5 Damage caused by transportation, incorrect use, or negligence will be excluded from the warranty. And if the parts are tempered by unauthorized, the warranty card losses effect.**

#### **14.6 Warnings**

To request a warranty, please send your device, warranty card, and invoice for the device to your Woodpecker distributor / importer within the warranty period. In order to be repaired during the warranty period, the purchaser shall return the repaired product to the distributor / importer at their expense.

**14.7 Parts must be properly packaged (or in original packaging) while being sent back.**

**14.8 All parts must be accompanied by the following information**

14.8.1 Buyer information, including phone numbers, etc.;

14.8.2 Distributor or importer information;

14.8.3 A copy of the photo of the goods, date of purchase, problem of part, part name and serial number;

14.8.4 Description of the problem.

**14.9 Any damage caused during transportation is not under warranty. If the problem is caused by incorrect use, the repair fee should be undertaken by the users.**

## **15. EMC-Declaration of conformity**

The device has been tested and homologated in accordance with EN 60601-1-2 for EMC. This does not guarantee in any way that this device will not be effected by electromagnetic interference Avoid using the device in high electromagnetic environment.

**Technical Description Concerning Electromagnetic Emission**

**Table 1: Declaration - electromagnetic emissions**

# Implanter/Implanter LED

## Guidance and manufacturer's declaration - electromagnetic emissions

The model Implanter/Implanter LED is intended for use in the electromagnetic environment specified below. The customer or the user of the model Implanter/Implanter LED should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The model Implanter/Implanter LED uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR11	Class B	The model Implanter/Implanter LED is suitable for used in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Complies	

## Technical Description Concerning Electromagnetic Immunity

**Table 2: Guidance & Declaration - electromagnetic immunity**

### Guidance & Declaration — electromagnetic immunity

The model Implanter/Implanter LED is intended for use in the electromagnetic environment specified below. The customer or the user of the model Implanter/Implanter LED should assure that It is used in such an environment.


Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±8kV contact ±2, ±4, ±8, ±15kV air	±8kV contact ±2, ±4, ±8, ±15kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.
Electrical fast transient/ burst IEC 61000-4-4	±2kV for power supply lines ±1kV for Input/output lines	±2kV for power supply lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±0.5, ±1kV line to line ±0.5, ±1, ±2kV line to earth	±0.5, ±1kV line to line ±0.5, ±1, ±2kV line to earth	Mains power quality should be that of a typical commercial or hospital environment.

<p>Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11</p>	<p>&lt;5 % UT (&gt;95% dip in UT.) for 0.5 cycle &lt;5 % UT (&gt;95% dip in UT.) for 1 cycle 70% UT (30% dip in UT) for 25 cycles &lt;5% UT (&gt;95 % dip in UT) for 250 cycles</p>	<p>&lt;5 % UT (&gt;95% dip in UT.) for 0.5 cycle &lt;5 % UT (&gt;95% dip in UT.) for 1 cycle 70% UT (30% dip in UT) for 25 cycles &lt;5% UT (&gt;95 % dip in UT) for 250 cycles</p>	<p>Mains power quality should be that of a typical commercial or hospital environment. If the user of the models Implanter/Implanter LED requires continued operation during power mains interruptions, it is recommended that the models Implanter/Implanter LED be powered from an uninterruptible power supply or a battery.</p>
<p>Power frequency (50/60 Hz) magnetic field IEC 61000-4-8</p>	<p>30A/m</p>	<p>30A/m</p>	<p>Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.</p>
<p>NOTE UT is the a.c. mains voltage prior to application of the test level.</p>			

**Table 3: Guidance & Declaration - electromagnetic immunity concerning Conducted RF & Radiated RF**

<p><b>Guidance &amp; Declaration - Electromagnetic immunity</b></p>			
<p>The model Implanter/Implanter LED is intended for use in the electromagnetic environment specified below. The customer or the user of the models Implanter/Implanter LED should assure that it is used in such an environment.</p>			
<p>Immunity test</p>	<p>IEC 60601 test level</p>	<p>Compliance level</p>	<p>Electromagnetic environment - guidance</p>

# Implanter/Implanter LED

<p>Conducted RF IEC 61000-4-6</p> <p>Conducted RF IEC 61000-4-6</p> <p>Radiated RF IEC 61000-4-3</p>	<p>3 Vrms 150 kHz to 80 MHz</p> <p>6 Vrms ISM frequency band</p> <p>3 V/m 80 MHz to 2.7 GHz</p>	<p>3V 6V 3V/m</p>	<p>Portable and mobile RF communications equipment should be used no closer to any part of the models Implanter/Implanter LED, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance</p> $d=1.2 \times P^{1/2}$ $d=2 \times P^{1/2}$ <p><math>d=1.2 \times P^{1/2}</math> 80 MHz to 800 MHz</p> <p><math>d=2.3 \times P^{1/2}</math> 800 MHz to 2.7 GHz</p> <p>where P is the maximum output power rating of the transmitter In watts (W) according to the transmitter manufacturer and d Is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,a should be less than the compliance level in each frequency range.b</p> <p>Interference may occur In the vicinity of equipment marked with the following symbol:</p> 
--	---	---------------------------	---

NOTE 1 At 80 MHz end 800 MHz. the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the model Implanter/Implanter LED is used exceeds the applicable RF compliance level above, the model Implanter/Implanter LED should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the model Implanter/Implanter LED.

b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3V/m.

**Table 4: Recommended separation distances between portable and mobile RF communications equipment and the model Implanter/Implanter LED**

<p><b>Recommended separation distances between portable and mobile RF communications equipment and the model Implanter/Implanter LED</b></p>
--

The model Implanter/Implanter LED is intended for use in electromagnetic environment in which radiated RF disturbances is controlled. The customer or the user of the model Implanter/Implanter LED can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the model Implanter/Implanter LED as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150kHz to 80MHz $d=1.2 \times P^{1/2}$	80MHz to 800MHz $d=1.2 \times P^{1/2}$	800MHz to 2,7GHz $d=2.3 \times P^{1/2}$
0,01	0.12	0.12	0.23
0,1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) accordable to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz. the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Scan and Login website  
for more information



Guilin Woodpecker Medical Instrument Co., Ltd.  
Information Industrial Park, Guilin National High-Tech  
Zone, Guilin, Guangxi, 541004 P. R. China  
Sales Dept.: +86-773-5873196  
[Http://www.glwoodpecker.com](http://www.glwoodpecker.com)  
E-mail: [woodpecker@glwoodpecker.com](mailto:woodpecker@glwoodpecker.com)

## Dental Implant Unit Warranty Card

Name of Customer		( I ) For Distributor
Address Details		
Postal Code		
Tel		
Model		
Main Unit No.		
Handpiece No.		
Contra-angle No.		
Purchase Date		
Contact Person		
Date	Maintenance Record	Repairer



**Guilin Woodpecker Medical Instrument Co., Ltd.**  
Information Industrial Park, Guilin National High-Tech  
Zone, Guilin, Guangxi, 541004 P. R. China

**Europe Sales Dept. Tel:** +86-773-5873196, 2125222

**North America, South America & Oceania Sales Dept. Tel:**  
+86-773-5873198, 2125123

**Asia & Africa Sales Dept. Tel:** +86-773-5855350, 2125896

**Fax:** +86-773-5822450

**E-mail:** woodpecker@glwoodpecker.com, sales@glwoodpecker.com

**Website:** <http://www.glwoodpecker.com>

Distributor:

Seal

## Dental Implant Unit Warranty Card

Name of Customer		( II ) Return to Manufacturer
Address Details		
Postal Code		
Tel		
Model		
Main Unit No.		
Handpiece No.		
Contra-angle No.		
Purchase Date		
Contact Person		
Date	Maintenance Record	Repairer



**Guilin Woodpecker Medical Instrument Co., Ltd.**  
Information Industrial Park, Guilin National High-Tech  
Zone, Guilin, Guangxi, 541004 P. R. China

**Europe Sales Dept. Tel:** +86-773-5873196, 2125222

**North America, South America & Oceania Sales Dept. Tel:**  
+86-773-5873198, 2125123

**Asia & Africa Sales Dept. Tel:** +86-773-5855350, 2125896

**Fax:** +86-773-5822450

**E-mail:** woodpecker@glwoodpecker.com, sales@glwoodpecker.com

**Website:** <http://www.glwoodpecker.com>

Distributor:

Seal

Cut along the dashed line



## Warranty Instruction

### I Period validity:

Within one year from the date of sale, the main unit, handpiece, foot pedal, and contra-angle can be repaired for free by providing warranty card.

### II Range of warranty:

Within the warranty period of validity, we are responsible for any troubles caused by quality problems or products technique and structure.

### III The following are beyond our warranty:

1. The damage caused by disobeying the operation instruction or lack of the needed condition.
2. The damage caused by unsuitable operation or disassembly without authorization.
3. The damage caused by unadvisable transportation or preservation.
4. There isn't the seal of distributor or the warranty card isn't filled in completed.

## Warranty Instruction

### I Period validity:

Within one year from the date of sale, the main unit, handpiece, foot pedal, and contra-angle can be repaired for free by providing warranty card.


### II Range of warranty:

Within the warranty period of validity, we are responsible for any troubles caused by quality problems or products technique and structure.

### III The following are beyond our warranty:

1. The damage caused by disobeying the operation instruction or lack of the needed condition.
2. The damage caused by unsuitable operation or disassembly without authorization.
3. The damage caused by unadvisable transportation or preservation.
4. There isn't the seal of distributor or the warranty card isn't filled in completed.

# Harm of fake products

 and **DTE** are two brands of Guilin woodpecker medical instrument company. Recently, growing fake ultrasonic scaler handpieces, tips curing lights are produced and sold on the market, which do harm to users' interest. On this issue, We Woodpecker will crack down fake products and provide safe and secure medical instrument products.

## 1. Harm of fake ultrasonic scaler handpieces.

- 1.1 Fake handpieces with poor-designed inner structure can lead to frequent power leakage, which may cause medical accidents.
- 1.2 Material used on fake handpieces don't pass biocompatible test, which can easily lead to irritability and poisoning.
- 1.3 Fake handpieces have quality problems of overheating, non-vibration and cracking, which cause ultrasonic scalers out of order.
- 1.4 Fake handpieces can't be compatible with ultrasonic scalers, thus leading to circuit burn out.

## 2. Harm of fake scaler tips.

- 2.1 Fake tips are low in toughness, poor in resistance and easy to crack, thus easily cause medical accident.
- 2.2 Fake tips' screw threads are roughly processed, which can cause handpiece's screw loosening and cracking.
- 2.3 Material used on fake tips is inferior and easily rusting, which can cause infection of patient.
- 2.4 Fake tips have used problem of poor water-spraying, bad screw-thread fit and water leaking, which leads ultrasonic scalers work wrongly.

## 3. Harm of fake curing light.

- 3.1 Fake curing light's batteries can cause self-ignite, even explosion with poor-quality material and no complete charging management.
- 3.2 Light intensity of fake curing light is not constant, when battery level goes down under 60%, it would lead to incomplete solidification of resin, causing secondary dental caries.

